

FIREFIGHT

MK16

MECHANICAL GAMING KEYBOARD

INSTRUCTION MANUAL

ADXMK1625



ADX 

Contents

Safety Warnings	3
Unpacking	4
Connecting the Keyboard	5
Function Keys	5
Volume Keys	6
Backlight Effects	6
Arrow Keys	7
Windows Key Lock	7
Reset	8
System Requirements	8
Hints and Tips	8
Specifications	9

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party, make sure to include this manual.
- Do not disassemble the keyboard or remove any parts.
- Do not immerse the keyboard in water or any liquid.
- Do not use the keyboard close to heat sources or expose to high temperatures.
- Do not use the keyboard where strong electromagnetic waves are present. Strong electromagnetic waves will cause damage to the keyboard.
- Keep the keyboard away from direct sunlight, moisture, dirt or abrasive chemical products (cleaning products etc).

Thank you for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

 


Gaming Keyboard



 
USB A to C Cable

Connecting the Keyboard

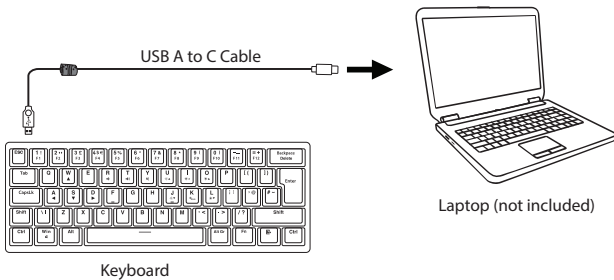

 
Function Keys

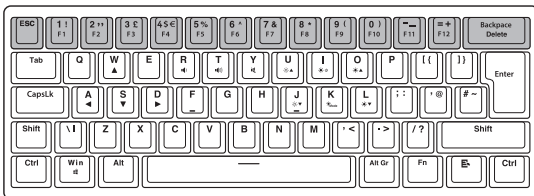


To access **ESC**, **F1-F12**, **Delete**, press the **Fn** Key and the desired key together.



Volume Keys

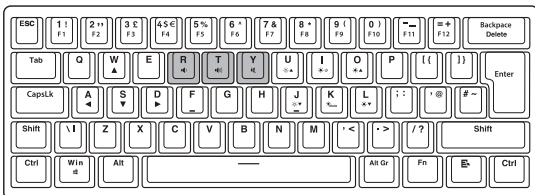 
To access volume function, press the **Fn** Key and the desired key together.



 
 


	Decrease the Volume
	Increase the Volume
	Mute sound

Backlight Effects

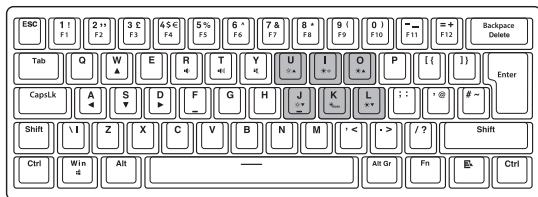To access these functions, press the **Fn** Key and the desired key together.



 
	Switch the backlight on/off.
	Select different backlight effects.
	Adjust the backlight flashing/breathing speed.
	Adjust the backlight brightness.



Make sure that the backlight is switched on after setting the backlight effects.

Arrow Keys

 
To access **Arrow Keys** function, press **Fn** Key and **W / A / S / D** together for your desired arrow direction.

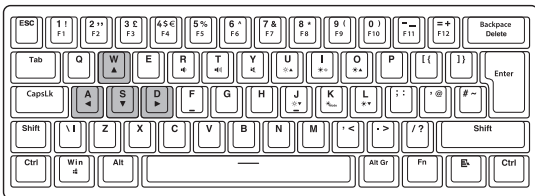

W ▲	Up
S ▼	Down
A ◀	Left
D ▶	Right

 
Windows Key Lock

Press **Fn** button and **⊞** button repeatedly to switch on/off the **Windows Key Lock** function.

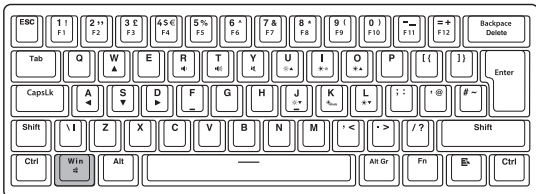

Reset

Press **Fn** and **Tab** button for about 3 seconds to reset the keyboard's default settings.

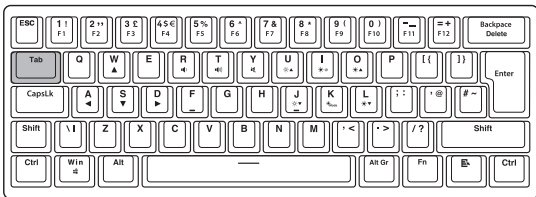







System Requirements

Operating Systems: Microsoft® Windows® 10 / 11

Hardware: 1 available USB A port

Hints and Tips

- Make sure the USB plug is fully plugged into a USB port and the computer is on or try to use a different USB port.
- If the unit is not working properly, re-insert the USB plug into the USB port.
- If the keyboard's backlight keeps off after setting:
 - Press **Fn** and   button to switch on the backlight.
 - Press **Fn** and   button to increase the brightness, and then press **Fn** and   button to switch on the backlight.
 - If it still does not work, press **Fn** and **Tab** button for about 3 seconds to reset the keyboard's default settings.

Specifications

Model	ADXMK1625
Operation Systems	Microsoft® Windows® 10 / 11
Dimension (L × W × H)	292.5 × 102 × 39 mm
Net Weight	585 g (with cable) 546 g (without cable)

Features and specifications are subject to change without prior notice.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.

UK: 0344 561 1234

IRE: 0818 810575

Partmaster
CO.UK

Visit
Partmaster.
co.uk

today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is

your responsibility to dispose of your waste equipment by handing it over to a

designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

All trademarks are the property of their respective owners and all rights are acknowledged.

Currys Group Limited (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

Currys Ireland Limited (259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland