

FIREPOWER

K13

GAMING KEYBOARD

INSTRUCTION MANUAL

ADXK1325



ADX 

Contents

Safety Warnings	3
Product Overview	4
Keyboard	4
Function Keys	5
Backlit Effects	6
Switching On/Off.....	6
Backlit Modes	6
Backlit Brightness Setup	6
Windows Key Lock	6
System Requirements	7
Hints and Tips	7
Specifications	7

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party, make sure to include this manual.
- Do not disassemble the keyboard or remove any parts.
- Do not immerse the keyboard in water or any liquid.
- Do not use the keyboard close to heat sources or expose to high temperatures.
- Do not use the keyboard where strong electromagnetic waves are present. Strong electromagnetic waves will cause damage to the keyboard.
- Keep the keyboard away from direct sunlight, moisture, dirt or abrasive chemical products (cleaning products etc).

 
Thank you for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Product Overview

Keyboard

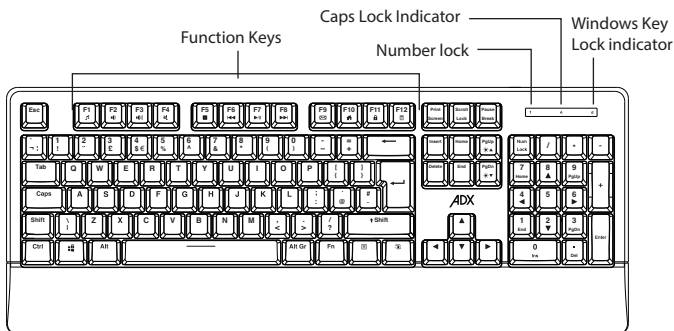










 


Function Keys

The keyboard has shortcut function keys* which can be used as shortcuts when using the keyboard.

To access these functions, press the **Fn** button and the desired key together.



	Start the default Media Player programme.
	Decrease the Volume
	Increase the Volume
	Mute sound
	Stop playback
	Back to previous track
	Play/pause track
	Go to next track
	Start the default e-mail programme.
	Start the default Web browser and load the Home Web page
	Lock all keys
	Open Calculator

* Not all functions are available, depending on your operating system.



Backlit Effects





Switching On/Off

Press  button repeatedly to switch **On/Off** the backlit of the unit.

 
Backlit modes

- When the backlit is **On**, press **Fn** button and  button repeatedly to switch it between **Breathing** or **Lights On** mode.
- When the backlit is **Off**, you may also press **Fn** button and  button to enter **Breathing** mode.

Backlit Brightness Setup

Press **Fn** button and   button to increase/decrease the backlit brightness.

Windows Key Lock

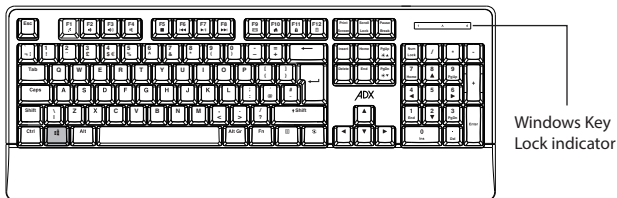

Press **Fn** button and  button to switch on the **Windows Key Lock** function. The **Windows Key Lock Indicator** will light up.

System Requirements

Operating Systems: Microsoft® Windows® 10 / 11

Hardware: 1 available USB A port

Hints and Tips

- Make sure the USB plug is fully plugged into a USB port and the computer is on or try to use a different USB port.
- If the unit is not working properly, re-insert the USB plug into the USB port.

Specifications

Model	ADXK1325
Operation Systems	Microsoft® Windows® 10 / 11
Dimension (L × W × H)	451.5 × 179.4 × 34.5 mm
Net Weight	732 g

Features and specifications are subject to change without prior notice.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or
you need plain good advice, we're
always on hand to help.

UK: 0344 561 1234

IRE: 0818 810575

Partmaster
CO.UK

Visit
Partmaster.
co.uk

today for the easiest way to buy electrical
spares and accessories. With over 1
million spares and accessories available
we can deliver direct to your door the
very next day. Visit www.partmaster.co.uk
or call 0344 800 3456 (UK customers
only). Calls charged at National Rate.



The symbol on the product or
its packaging indicates that
this product must not be
disposed of with your other
household waste. Instead, it is

your responsibility to dispose of your
waste equipment by handing it over to a

designated collection point for the
recycling of waste electrical and
electronic equipment. The separate
collection and recycling of your waste
equipment at the time of disposal will
help conserve natural resources and
ensure that it is recycled in a manner that
protects human health and the
environment.

For more information about where you
can drop off your waste for recycling,
please contact your local authority, or
where you purchased your product.

Windows is a registered trademark of
Microsoft Corporation in the United
States and other countries.

All trademarks are the property of their
respective owners and all rights are
acknowledged.

Currys Group Limited (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

Currys Ireland Limited (259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland