

FIREPOWER

M16

GAMING WIRELESS MOUSE

INSTRUCTION MANUAL

ADXWM1625



ADXC 

Contents

Safety Warnings	3
Unpacking	7
Product Overview	8
Top View	8
Bottom View.....	8
Charging the Mouse	9
Wireless Connection	10
Rainbow Light Indicator Settings	11
DPI Settings	11
System Requirements	12
Hints and Tips	12
Specifications	12
Battery.....	12

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party, make sure to include this manual.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, unplug from the mains socket and consult your dealer.

Wireless Devices

- Before boarding any aircraft or packing a wireless device in luggage that will be checked in, remove the batteries from the wireless device.
- Wireless devices can transmit radio frequency (RF) energy, whenever batteries are installed and the wireless device is turned on (If it has an On/Off switch).

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the working performance of the unit.



Never point the optical sensor towards the face, particularly the eyes, to avoid possible injury.



While the mouse is functioning, the optical light is visible to the naked eye. Avoid looking directly into the emitter hole while the mouse is active.

Battery-Powered Devices:

Rechargeable Lithium Ion batteries are potentially hazardous and can present a serious FIRE HAZARD if damaged, defective or improperly used.

- Always charge in a well ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
- Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
- Disposal of battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in explosion.
- Leaving a battery in an extremely high temperature environment can result in explosion or leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or leakage of flammable liquid or gas.
- Do not short-circuit the product or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- Improper use of batteries may result in battery fluid leakage, overheating or explosion.
- Do not disassemble the product or remove any parts.
- Never discharge a Li-ion battery at a rate exceeding the maximum discharge current specified for that battery.
- Immediately discontinue use of the battery if, while using or charging the battery emits an unusual smell, feels hot or appears abnormal in any other way.
- Do not use the product where strong electromagnetic waves are present. Strong electromagnetic waves will cause damage to the product.
- Do not use the product if the temperature is too high or too low, your batteries may be damaged. If the humidity is too high, your batteries may be damaged.
- When the product is charging, keep it away from direct sunlight, moisture, dirt or abrasive chemical products (cleaning products etc.).
- Battery life and charge cycles may vary by use and settings.

Built-in Battery Care

- Your product is powered by a built-in rechargeable battery.
- The battery can be charged and discharged hundreds of times, but will eventually wear out.

- Unplug the charger from the electrical plug and the product when not in use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep your device in a cool, moisture-free environment that is less than 32°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- If you plan to store your device for longer than six months, charge the battery for an hour every six months to keep it fresh.
- The unit should be fully recharged after using the device each time. This will keep the lifetime of the battery.


Battery Warning!


- The battery used in this product may present a risk of fire or chemical burn if mistreated.
- Do not attempt to open the product or replace the battery. It is built-in and not changeable. Use of other batteries may present a risk of fire or explosion and the warranty will be terminated.
- Only recharge your battery with the provided approved USB cable designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Batteries may explode if damaged.


Proper Disposal

- ALWAYS dispose of batteries according to local, state or federal laws. DO NOT put Lithium-Ion Batteries in the trash. Consult your local waste authority for information about recycling or disposal options. You may be able to bring Lithium-Ion Batteries and Battery Packs to local stores for proper disposal.

 This unit is designed for indoor use only.

 This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

 AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.

 DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.



There is no charger provided.



The minimum power delivered by the charger shall be equal or higher than 3 Watts.

Thank you for purchasing your new product.

 
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

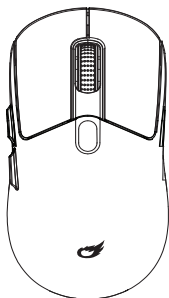


Main Unit



USB to USB Type C Cable


Product Overview

 Top View

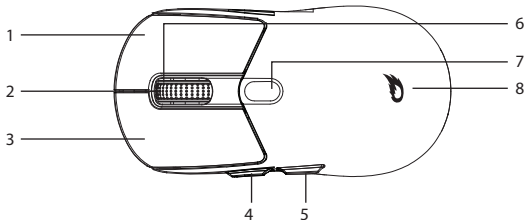

- | | |
|--------------------------|---|
| 1. Right Button | 5. Backward Button |
| 2. Scroll Wheel | 6. Red LED Light |
| 3. Left Button | 7. DPI Button
Press to adjust the DPI resolution. |
| 4. Forward Button | 8. Rainbow Light Indicator |

 Bottom View

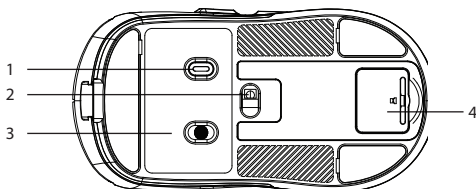


- | |
|--|
| 1. Rainbow Light On/Off Button |
| 2. Optical Sensor |
| 3. Power On/Off Switch
Switch on/off the unit. |
| 4. Dongle Compartment Cover |

Charging the Mouse


Fully charge the unit before first use.

 1. Plug the Type C connector of the USB charging cable (included) into the charging port of the mouse.
2. Insert the other end of the USB charging cable into your laptop or computer (not included).

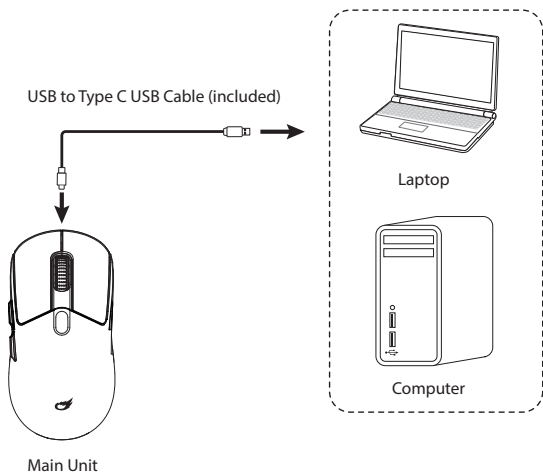


Wireless Connection

 
1. Open the **Dongle Compartment Cover** and take the **Dongle** out from the unit.

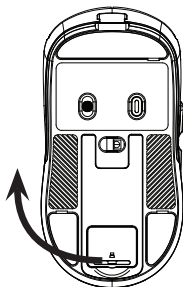

 2. Plug the **Dongle** directly into your computer's USB A port.

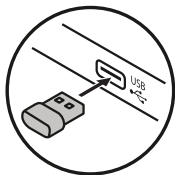

 
3. Slide the On/Off toggle to the **ON** position to switch on the unit.

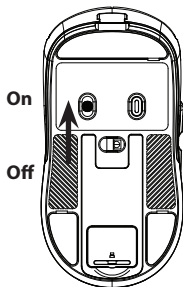

Switch off the unit to conserve energy if it is not used for a long period of time.

Rainbow Light Indicator Settings

 Press the **Rainbow Light On/Off Button** repeatedly to switch on/off the Rainbow Light Indicator.

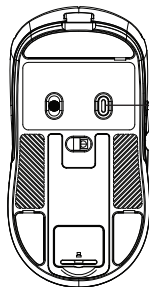

On/Off Button of
Rainbow Light
Indicator



- The **Rainbow Light Indicator** will switch off automatically after the unit is idle for about 1 minute.
- After the **Rainbow Light On/Off Button** is switched on, the indicator will activate only when any other buttons is pressed.

DPI Settings

Press the **DPI** button on the mouse repeatedly to select desired DPI resolution. The red light indicator will flash different times to indicate the corresponding DPI resolution.

Red Light Flashing Time	DPI
1	800
2	1600
3	3200
4	4400
5	6000
6	7200

System Requirements

Operating Systems: Microsoft® Windows® 10 / 11

Hardware: 1 available USB A port

Hints and Tips

- Make sure the USB plug is fully plugged into a USB port and the computer is on or try to use a different USB port.
- If the mouse is moving erratically, change the working surface which the mouse is operating on.
- If the unit is not working properly, re-insert the USB plug into the USB port.

Specifications

Model	ADXWM1625
Operation Systems	Microsoft® Windows® 10 / 11
Resolution	800 / 1600 / 3200 / 4400 / 6000 / 7200
Frequency Range	Mouse: 2400 - 2481 MHz Dongle: 2400 - 2481 MHz
Max. Radio Frequency Power Transmitted	Mouse: 4 dBm Dongle: 4 dBm
Dimension (L × W × H)	125.3 × 63.3 × 40 mm
Net Weight	78 g (without cable) 110.2 g (with cable)

Battery

Model	602040
Battery Type	DC 3.7V 450mA
Battery Rating	3.7V 450mAh 1.665Wh
Number of Battery	1
Designation Code	1ICP6/20/41
Manufacturer	Donguan Nuolei Electron Industry Co., Ltd
Dimension	20 × 6 × 40 mm
Net Weight	10 g

Features and specifications are subject to change without prior notice.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.

UK: 0344 561 1234

IRE: 0818 810575

Partmaster
CO.UK

Visit
Partmaster.
co.uk
today for

the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is

your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate

collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

All trademarks are the property of their respective owners and all rights are acknowledged.

Currys Group Limited (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

Currys Ireland Limited(259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland