



PS5™ DUAL CHARGING STATION

INSTRUCTION MANUAL

APS5CS22



NOT INCLUDED

PS5® DualSense™ Wireless Controller

Contents

Safety Warnings	4
Unpacking	6
Product Overview	7
Top View	7
Side View	7
Charging the Controller(s)	8
Charging Indicator	9
Maintenance	10
Hints and Tips	10
Specifications	11

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- Always insert the USB device in the correct direction. Failure to do so may result in damage to the USB device and this unit.
- The power supply must be located near the unit and should be easily accessible.
- Do not use the charger when it is damaged.
- Do not use with a damaged USB charging cable as it can cause overheating and damage to your device.
- Do not drop, tamper, disassemble or attempt to repair the unit by yourself.
- Do not immerse it in water or expose it to wet conditions.
- This product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- For indoor use only.
- Avoid exposure to external heat sources; direct, prolonged sunlight; dust; corrosive chemicals; and moisture.
- Do not drop the product or subject it to undue shock.
- This product contains small parts. Keep out of reach of children.
- Keep children away from the packaging material as there is a risk of suffocation.
- Dispose of packaging material according to applicable local regulations.
- Do not attempt to service or disassemble. If you experience problems with the unit, discontinue use and contact Customer Support for assistance. Attempting to open or service the unit will void all warranties, express or implied.
- Failure to follow these directions may void the warranty.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



This unit is designed for indoor use only.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.



DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Thank you for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



 
PS™ Dual Charging Station × 1



Controller Adaptor × 2


Product Overview

Top View

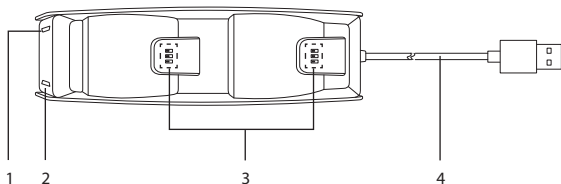

1. LED Charging Indicators (Charging Dock A)
2. LED Charging Indicators (Charging Dock B)
3. Charging Connector
4. Connecting Cable

 
Side View

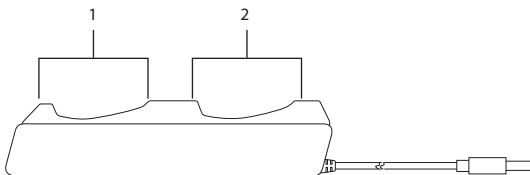

1. Charging Dock A
2. Charging Dock B


Charging the Controller(s)

 1. Connect the **Charging Station** to your PS5™ console (not included) or USB charging device (not included). The indicators show blue and then red light

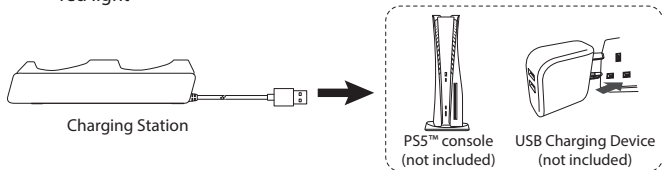


Use a standard USB adaptor (5V, 2A or above) for charging.

 2. Insert the **Controller Adaptor** into your PS5™ Controller (not included).

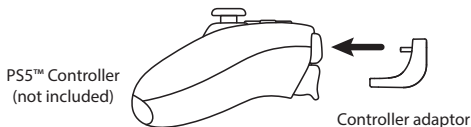

 3. Place the controller(s) (not included) onto the **Charging Dock A / B**. The indicator(s) will light up red while charging.

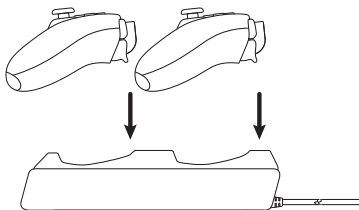

Check the indicator(s) after placing the controller(s). Make sure that the indicator(s) light up red for charging.

Charging Indicator

Charging indicator	Status
Light up red	Charging
Light up blue	Fully charged
Fast flash in red	Charging over current <ul style="list-style-type: none">Remove the Controller(s) from the charging dock and unplug the USB cable from input and then re-connect.



- It takes 4 hours (approximately) to fully charge an official PS5™ DualSense™ Controller. Remove the controller from the charging station when the indicator lights up blue.
- The unit supports a maximum of two controllers for charging.



Do not overcharge the controller as it may shorten its life. Disconnect the USB cable, or remove the controllers from the charging docks after fully charged.

Maintenance



Ensure the USB cable is fully unplugged from the unit before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Hints and Tips

Problem	Solution
Charging does not work.	<ul style="list-style-type: none">• Make sure the connecting cable is fully plugged into a USB port and the game console, or try to use a different USB port.• Make sure that the controller is correctly placed onto the charging dock.

Specifications

Model	APS5CS22
Input Voltage	DC 5V
Input Current	DC 2A (Max.)
Single Group Conductive Charging Current	750 mA (Max.)
Dual Group Conductive Charging Current	1500 mA (Max.)
Dimension (L × W × H)	22.45 mm × 63.65 mm × 47.1 mm (cable excluded)
Net Weight	Charging Station: 163 g Charging Adaptor: 8 g × 2

Features and specifications are subject to change without prior notice.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.

UK: 0344 561 1234

IRE: 1890818 575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call **0344 800 3456** (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is

your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

PS5™ and DualSense™ are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

Currys Group Limited (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

Currys Ireland Limited (259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland