



XBOX® DUAL DOCKING STATION

INSTRUCTION MANUAL

AXBOXCS22



NOT INCLUDED

Xbox® One / X / S Controller

Contents

Safety Warnings	3
Unpacking	7
Product Overview	8
Top View	8
Side View	8
Charging the Controller(s)	9
Charging Indicator	11
Maintenance	11
Hints and Tips	12
Specifications	12
Charging Station.....	12
Battery	13

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- Always insert the USB device in the correct direction. Failure to do so may result in damage to the USB device and this unit.
- The power supply must be located near the unit and should be easily accessible.
- Do not use the charger when it is damaged.
- Do not use with a damaged USB charging cable as it can cause overheating and damage to your device.
- Do not drop, tamper, disassemble or attempt to repair the unit by yourself.
- Do not immerse it in water or expose it to wet conditions.
- This product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- For indoor use only.
- Avoid exposure to external heat sources; direct, prolonged sunlight; dust; corrosive chemicals; and moisture.
- Do not drop the product or subject it to undue shock.
- This product contains small parts. Keep out of reach of children.
- Keep children away from the packaging material as there is a risk of suffocation.
- Dispose of packaging material according to applicable local regulations.
- Do not attempt to service or disassemble. If you experience problems with the unit, discontinue use and contact Customer Support for assistance. Attempting to open or service the unit will void all warranties, express or implied.
- Failure to follow these directions may void the warranty.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Battery Pack

- The battery pack will generate heat when charging. Always charge in a well ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
- Do not short-circuit the battery pack or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- Do not operate the battery pack if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
- Do not expose it to fire or any heat source.
- Do not dispose the unit in your household waste.
- Before charging, please refer to the user's manual of your specific device for the manufacture's required charging amperage and determine the appropriate charging cable for your device.
- Always insert the USB cable in the correct direction. Failure to do so may result in damage to the USB cable and this unit.
- Only use with products designed to be powered or charged via a USB socket.
- Battery pack usage by children should be supervised.
- For IT equipment use only.

While in use

- Unwind the cable to its full length.
- Never wrap the cable around the unit, or coil it together or leave it tangled. Doing so may result to product damage and related hazards.
- Do not charge the Powerbank and charge a digital device at the same time. This will shorten the Powerbank's battery life.

Built-in Battery Care

- Your product is powered by a built-in rechargeable battery.
- The battery can be charged and discharged hundreds of times, but will eventually wear out.
- Unplug the charger from the electrical plug and the product when not in use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep your device in a cool, moisture-free environment that's less than 32°C. A product with a hot or cold battery may not

work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

- If you plan to store your device for longer than six months, charge the battery for an hour every six months to keep it fresh.
- The unit should be fully recharged after using the device each time. This will keep the health of the battery.

Battery Warning!

- The battery used in this product may present a risk of fire or chemical burn if mistreated.
- Do not attempt to open the product or replace the battery. It is built-in and not changeable. Use of other batteries may present a risk of fire or explosion and the warranty will be terminated.
- Only recharge your battery with the provided approved USB cable designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Batteries may explode if damaged.



This unit is designed for indoor use only.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.



DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Thank you for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

 
The following items are included:




XBOX® Dual Charging Station



Rechargeable Battery × 2



 
Battery Compartment Cover
(Xbox one) × 2



Battery Compartment Cover
(Xbox X / S) × 2


Product Overview

 Top View

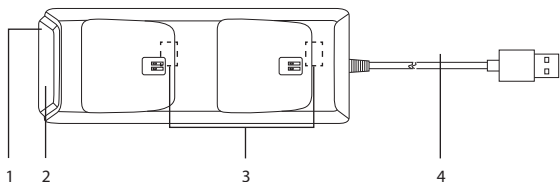

1. LED Charging Indicators (Charging Dock A)
2. LED Charging Indicators (Charging Dock B)
3. Charging Connector
4. Connecting Cable

 
Side View

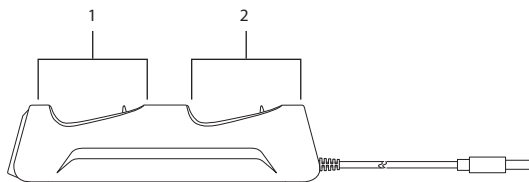

1. Charging Dock A
2. Charging Dock B


Charging the Controllers

 1. Connect the **Charging Station** to your Xbox® console (not included) or USB charging device (not included). The indicators show green and then red light

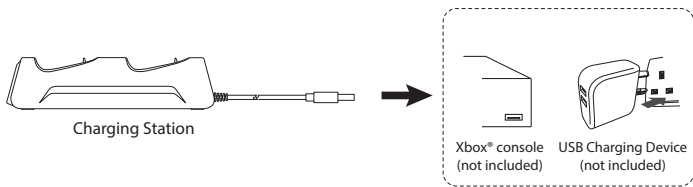


Use a standard USB adaptor (5V, 1A or above) for charging.

 
2. Insert the **Rechargeable Battery** into the battery compartment. Make sure that the battery is correctly placed in the compartment.

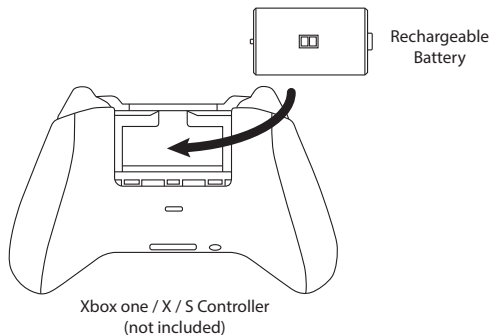

 3. Place the **Battery Compartment Cover** (Xbox one or Xbox X / S) on the battery compartment.

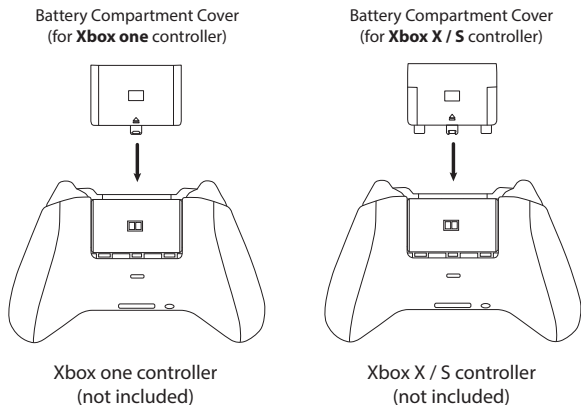

 4. Place the controller(s) (not included) onto the **Charging Dock**. The indicator(s) will light up **red** while charging.

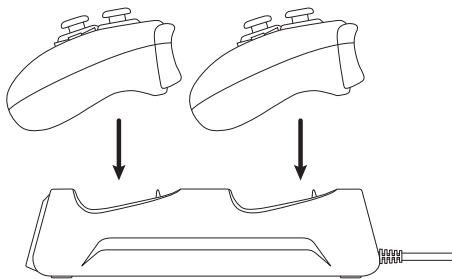

Check the indicator(s) after placing the controller(s). Make sure that the indicator(s) light up **red** for charging.

Charging Indicator

Charging indicator	Status
Light up red	Charging
Light up green	Fully charged
Fast flash in red	Charging over current <ul style="list-style-type: none">Remove the Controller(s) from the charging dock and unplug the USB cable from input and then re-connect.



- It takes 6-7 hours (approximately) to fully charge an official Xbox® Wireless Controller. Remove the controller from the charging station when the indicator lights up **green**.
- The unit supports a maximum of two controllers for charging.



Do not overcharge the controller as it may shorten its life. Disconnect the USB cable, or remove the controllers from the charging docks after fully charged.

Maintenance



Ensure the USB cable is fully unplugged from the unit before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Hints and Tips

Problem	Solution
Charging does not work.	<ul style="list-style-type: none">• Make sure the connecting cable is fully plugged into a USB port and the game console, or try to use a different USB port.• Make sure that the controller is correctly placed onto the charging dock.

Specifications

Charging Station

Input Voltage	DC 5V
Input Current	550mA
Single Group Conductive Charging Current	240 mA
Dual Group Conductive Charging Current	480 mA
Dimension (L × W × H)	213.78 mm × 55.3 mm × 79.6mm (cable excluded)
Net Weight	Charging Station: 168.8 g

Battery

Battery Pack	
Model	AXBOXCS22 Battery Pack
Battery Type	Ni-MH
Battery Rating	2.4V 1200 mAh
Designation Code	2HRMU14/44
Manufacturer	GT-COUPE ELECTRONIC CO. LTD.
Dimension (L × W × H)	54.5 mm × 29.06 mm × 15.95 mm
Net Weight	42.7 g
Battery Cell	
Model	SAA 1200mAh
Battery Type	Ni-MH
Battery Rating	1.2V 1200 mAh
Designation Code	HRMU14/44
Manufacturer	Hu Nan Grepow New Energy Co., Ltd
Dimension (L × W × H)	35 mm × 35 mm × 43.1 mm
Net Weight	19.1 g

Features and specifications are subject to change without prior notice.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.
UK: 0344 561 1234
IRE: 1890818 575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call **0344 800 3456** (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



Notes for battery disposal

The batteries used with this product contain chemicals that are harmful

to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

Xbox® Series X/S & Xbox One® and Xbox® logo are either registered trademarks or trademarks of Microsoft Corporation in the US and/or other countries.

Currys Group Limited (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

Currys Ireland Limited (259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland