

FIREPOWER

WMK07

WIRELESS RGB GAMING MOUSE

INSTRUCTION MANUAL
ADXWM0720



ADX 

Contents

Safety Warnings	3
Unpacking	4
Product Overview	5
System Requirements	5
Software Installation	5
User Interface	6
DPI Setting	7
Lighting Effect	8
Performance	9
Polling Rate	10
Macro Editor	11
Hints and Tips	12
Specifications	12

Safety Warnings



Never point the optical sensor towards the face, particularly the eyes, to avoid possible injury.

- While the mouse is functioning, the optical light is visible to the naked eye. Avoid looking directly into the emitter hole while the mouse is active.
- Your product complies with CE rules.
- This product has no serviceable parts. Use of controls or adjustments of procedures other than the Instruction Manual may result in danger.

Thank you for purchasing your new product.

 
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

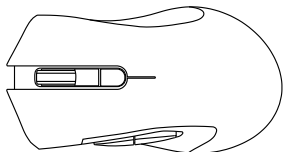


Gaming Mouse (with dongle)

USB Cable

Product Overview

 Top View

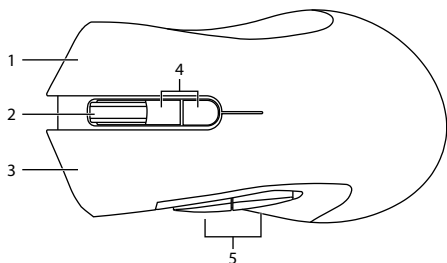

1. Right Button

2. Scroll Wheel

 
3. Left Button

4. DPI Button

Select different dpi.

5. Forward/Backward Buttons

Bottom View

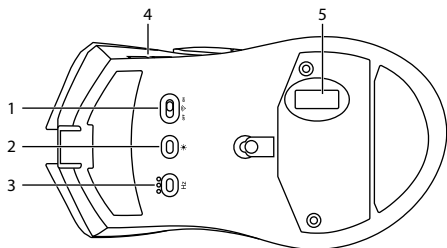

1. Wireless ON/OFF

2. Brightness Switch

3. Polling Rate Switch

4. DPI Indicators

5. Dongle Compartment

System Requirements

Operating Systems: Microsoft® Windows® 8 / 10

Hardware: 1 available USB port

Wireless Connect

1. Ensure the **Wireless Mode** switch is in **ON** position. The wireless function will enable.
2. Plug the dongle directly into your computer's USB port. The mouse will automatically connect to the computer.

Wired Connect

1. Ensure the **Wireless Mode** switch is in **OFF** position. The wireless function will disable.
2. Connect your computer and the mouse with the USB type C cable.






The **Wireless Mode** switch to **OFF** position, the wireless function is disable. If necessary, remove the nano dongle and insert it in the dongle dock at the rear of the mouse as the dongle is very small and can be easily lost.

Charging the Battery

When using the unit for the first time, charge it fully first.

1. Connect the USB type C cable to the mouse.
2. Connect the other end of the USB charging cable to a powered USB device.

Status	LED Indicator
Low battery	The  indicator will flash.
Charging	The  indicator will light up.
Fully charged	The  indicator will turn off.



To achieve the best charging speed, turn the **Charging Mode** switch to **ON** position. However, the wireless connection will be disconnected.

Energy Saving

If the mouse does not use for a long period, switch the **Charging Mode** switch into the **OFF** position and turn the **Brightness** button to **OFF** mode to conserve energy.

The mouse will automatically power down when it is idled for 5 minutes. To wake it up press any key.

Software Installation

 
1. Plug the unit into the USB port of your computer.
2. Download the latest gaming software from **<https://downloads.adxgaming.com>**
3. Run the software installer.
4. Follow the installation instruction to complete the installation.
5. Choose **ADX ADXWM0720.exe** from the desktop to start the software.



The software is not available for MAC OS.

User Interface

Choose **ADX ADXWM0720.exe** from the desktop to start the software.

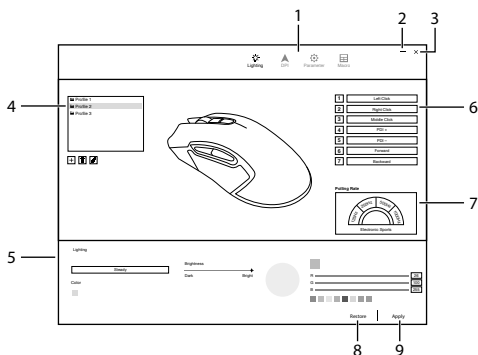

1. Setting Options

2. Minimise the software

3. Exit the software

4. Select profile

5. Selected setting option

6. Customising the Buttons

- Change the mouse button into desired functions from the function list.
- At least 1 mouse button must remain as the primary button (left click).

7. Polling Rate

 
The higher the polling rate, the more often the computer receives information about the status of your mouse, thus increasing the mouse pointer's reaction time. You can select among 125Hz (8ms), 500Hz (2ms) and 1000Hz (1ms).

8. Restore to default setting

9. Save the current setting

Lighting Effect

Select **Lighting Effect** from the user interface.

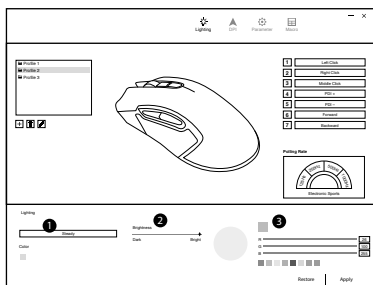

1. Lighting effect option

 
2. Brightness level

3. Customise the colour

Select desired LED colour.

DPI Setting

Select **PDI Setting** from the user interface.

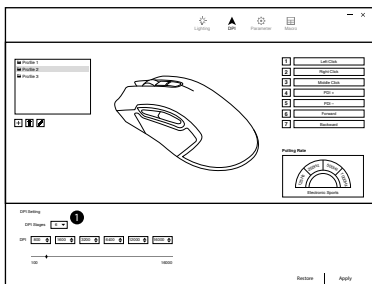


1. DPI Setting

Sensitivity (DPI) pertains to how much effort is needed to move the mouse pointer in any direction. The higher the DPI, the faster the mouse movement.

Performance

 Select **Performance** from the user interface.

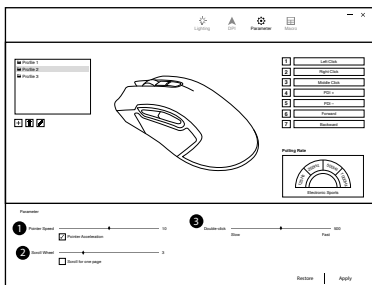

1. Pointer Speed

Adjust the speed of your mouse pointer.

2. Scroll Wheel

 
Adjust the scrolling speed.

3. Double-click

Adjust the double click response time.

Macro Editor

Select **MACRO** from the user interface.

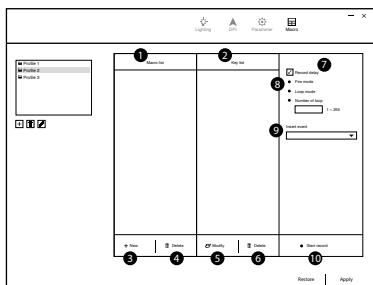

1. Macro List

A list of macro profile.

2. Keypress recorded

3. Create New Macro

Create new macro profile.

4. Delete Current Item

Delete selected macro or command.

5. Modify

Edit the selected keypress or delay.

6. Delete

Delete selected keypress or delay.

7. Record Delays

Insert time delay between each command while recording macro.

* Delay (1sec = 1000ms)

8. Macro Type

Choose a macro type.

Fire mode: macro will repeat as long as the button is clicked.

Loop mode: click once to start looping the macro, click again to stop.

Number of loops

9. Insert option

10. Start/Stop record

Specifications

Mouse

Model	ADXWM0720
Rated Input	DC 5V 500mA
Wireless Frequency	2.4GHz
Operating Range	< 8m (open space)
Frequency Band(s)	2400 – 2482 MHz
Max. Radio Frequency Power Transmitted	Mouse: -1 dBm Dongle: 2 dBm
Battery Life	Up to 19 hrs
Charging Time	4.5 hrs
Operation Temp.	5 – 40 °C
Dimensions	131.7 × 69.4 × 41.4 mm
Net Weight	107 g

Batteries

Model	ARS602040
Battery Type	DC 3.7V 450mA
Battery Rating	3.7V 450mAh 1.66Wh
Number of Battery	1
Designation Code	1ICP6/20/40
Manufacturer	Dongguan Airuisi Battery Co. Ltd.
Dimension	40.2 × 20.2 × 6.2 mm
Net Weight	9.4 g

Features and specifications are subject to change without prior notice.

Hints and Tips

- Restart the computer.
- If the software is not working properly, uninstall it and then reboot the computer. Re-install the software.
- If the mouse is moving erratically, change the working surface which the mouse is operating on.

Wireless Mode

- Recharge the battery if the mouse no longer reacts to input.
- If the Nano Receiver is plugged into a USB hub, try plugging it directly into the computer.
- If mouse performance is slow or intermittent around a wireless network, unplug the Nano Dongle from the USB port and then reinsert it. To reactivate the mouse, switch it to **OFF** position and to **ON** position again using the **Wireless Mode** switch on the bottom of the mouse.

Wired Mode

- Make sure the USB plug is fully plugged into a USB port and the computer is on or try to use a different USB port.
- If mouse performance is slow or intermittent, unplug the USB cable from the USB port and then reinsert it.



Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

All trademarks are the property of their respective owners and all rights are acknowledged.



Declaration of Conformity (RED)

Hereby, DSG Retail Ltd. declares that the radio equipment type [ADXWM0720] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.teamknowhow.com/>

Click on **SEARCH** and enter the model number.

DSG Retail Ltd. (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

DSG Retail Ireland Ltd (259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland

IB-ADXWM0720-201009V1