

FIREFIGHT WWMK05



RGB WIRELESS TKL MECHANICAL GAMING KEYBOARD

INSTRUCTION MANUAL
ADXWMK0520



Contents

Safety Warnings	3	Wired Connect	7
Unpacking	5	Function Keys	8
System Requirements	5	Backlight Effect	9
Product Overview	6	Customising the Backlight Effect	10
Charging the Battery	7	Specifications	11
Wireless Connect	7	Hints and Tips	12

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party, make sure to include this manual.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, unplug from the mains socket and consult your dealer.

Wireless Devices

- Wireless devices can transmit radio frequency (RF) energy, whenever batteries are installed and the wireless device is turned on (If it has an On/Off switch).

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the working performance of the unit, and cause a distorted sound.

Built-in Battery Care

- Your product is powered by a built-in rechargeable battery.
- The battery can be charged and discharged hundreds of times, but will eventually wear out.
- Unplug the charger from the electrical plug and the product when not in use.

- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep your device in a cool, moisture-free environment that's less than 32°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- If you plan to store your device for longer than six months, charge the battery for an hour every six months to keep it fresh.
- The unit should be fully recharged after using the device each time. This will keep the health of the battery.
- Do not attempt to open the product or replace the battery. It is built-in and not changeable. Use of other batteries may present a risk of fire or explosion and the warranty will be terminated.
- Only recharge your battery with the provided approved USB cable designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Batteries may explode if damaged.

Battery Warning!

- The battery used in this product may present a risk of fire or chemical burn if mistreated.

Thank you for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Gaming keyboard (with USB dongle)

 
System Requirements

Operating Systems: Microsoft® Windows® 8 / 10

Hardware: 1 available USB port

Product Overview

 
Top View

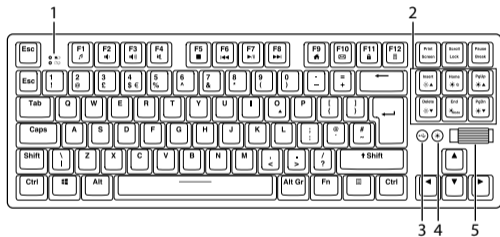

- 1. Battery Indicators
- 2. Light effect
- 3. Wired / Wireless Switch

- 4. Brightness ON/OFF
- 5. Volume Control


Bottom View

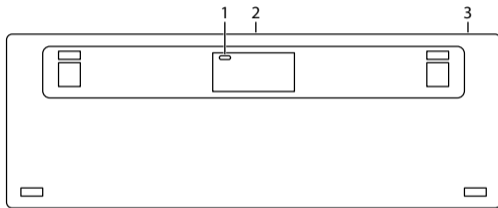

- 1. Charging Mode
- 2. USB Type C Socket

- 3. USB Dongle Storage


Wireless Connect

1. Press the  button until the LED is off.
2. Plug the Dongle directly into your computer's USB port. The keyboard will automatically connect to the computer.



Ensure the **Charging Mode** switch is in **OFF** position.




Wired Connect

1. Press the  button until the LED is on.
2. Connect your computer and the keyboard with the USB type C cable.

Charging the Battery

When using the unit for the first time, charge it fully first.

1. Connect the USB type C cable to the keyboard.
2. Connect the other end of the USB charging cable to a powered USB device.









Status	LED Indicator
Low battery	The  indicator will flash.
Charging	The  indicator will light up.
Fully charged	The  indicator will turn off.

 






To achieve the best charging speed, turn the **Charging Mode** switch to **ON** position. However, the wireless connection will be disconnected.

Function Keys

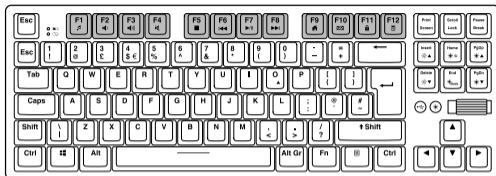To access these functions, press the **FN** Key and the desired key together.

	Start the default Media Player programme
	Decrease the Volume
	Increase the Volume
	Mute sound
	Stop playback
	Back to previous track
	Play/pause track
	Go to next track







 
	Start the default Web browser and load the Home Web page
	Start the default e-mail programme
	Lock Keyboard
	Open Calculator

* Not all functions are available, depending on your operating system.

Backlight Effect




To access these functions, press the **Fn** Key and the desired key together.

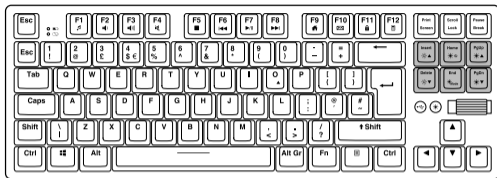 
	Adjust the backlight flashing sequence level.
	Switch the backlight on/off.
	Select different backlight effects. (5 modes / 1 customised mode)
	Adjust the backlight brightness.
Spacebar	Change the backlight colour.




Customising the Backlight Effect

You may customise the backlight for each keypress.

1. Press **Fn** +  repeatedly to select customise backlight mode. Keypress **WASD** and **◀▲▼▶** will light up as the first time.
2. Press and hold **Fn** +  to enter backlight setting mode. **CAPS** and **WIN** keypresses will start flashing.
3. Press **Fn** + **Spacebar** to select the colour (8 colours + 1 colourless). **Spacebar** will flash the colour which is chosen.
4. Press and hold **Fn** +  when done. **CAPS** and **WIN** keypresses will stop flashing.

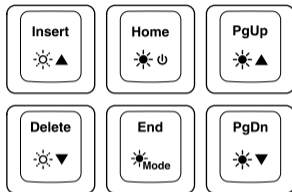

To reset customised backlight effect to default setting, press and hold **Fn** +  until all backlights start lighting in succession.

Specifications

Keyboard

Model	ADXWMK0520
Rated Input	DC 5V 500mA
Wireless Frequency	2.4GHz
Operating Range	< 8m (open space)
Frequency Band(s)	2406 – 2470 MHz
Max. Radio Frequency Power Transmitted	Keyboard: -8 dBm Dongle: -12 dBm
Battery Life	Up to 10 hrs
Charging Time	4.5 hrs
Operation Temp.	5 – 40 °C
Dimensions (L x W x H)	362 × 134 × 35 mm
Net Weight	885 g

Batteries

Model	ARS3034120
Battery Type	DC 3.7V 1000mA
Battery Rating	3.7V 1000mAh 3.7Wh
Number of Battery	1
Designation Code	1ICP4/35/51-2
Manufacturer	Dongguan Airuisi Battery Co. Ltd.
Dimension	120 × 34.2 × 3.2 mm
Net Weight	26 g

Features and specifications are subject to change without prior notice.

Hints and Tips

- Restart the computer.
- Recharge the battery if the keyboard no longer reacts to input.
- Make sure the USB plug is fully plugged into a USB port and the computer is on or try to use a different USB port.
- If the Nano Receiver is plugged into a USB hub, try plugging it directly into the computer.
- If keyboard performance is slow or intermittent around a wireless network, unplug the Nano Dongle from the USB port and then reinsert it. To reactivate the keyboard, switch it off, on and off again using the **Charger Mode** switch on the bottom of the keyboard.



Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not

dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste

electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

All trademarks are the property of their respective owners and all rights are acknowledged.



Declaration of Conformity (RED)

Hereby, DSG Retail Ltd. declares that the radio equipment type [ADXWMMK0520] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.teamknowhow.com/>

Click on **SEARCH** and enter the model number.

DSG Retail Ltd. (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

DSG Retail Ireland Ltd (259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland

IB-ADXWMK0520-200915V1